

INSTALLATION INSTRUCTIONS

Form No.
8870
ECL-A

PLEASE READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE YOU BEGIN
THE INSTALLATION.


PART NUMBER

525

527


528

529


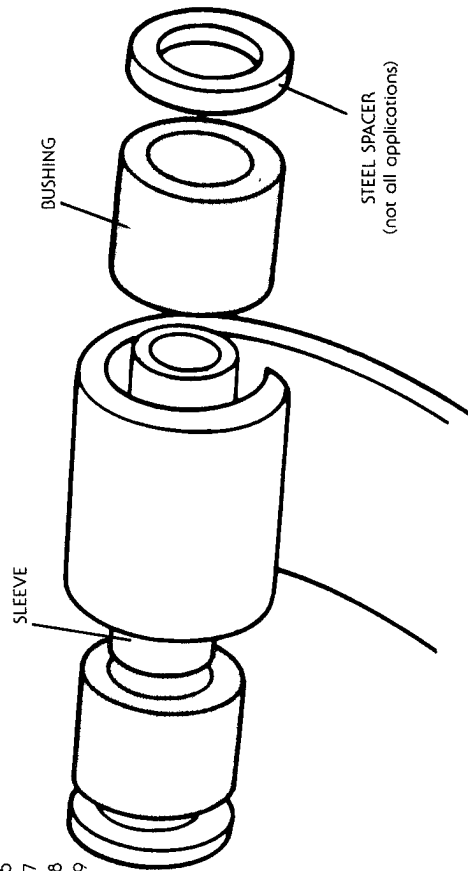


3. Place spring eye on small wood block, spray bushing assembly with silicone spray and install into spring with half way bushing first and a hammer.

1. Install sleeve into one bushing all the way using silicone spray for a lubricant and a small hammer to tap in sleeve.

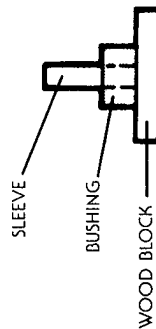

2. Install other bushing half way onto sleeve using silicone spray and a small hammer.

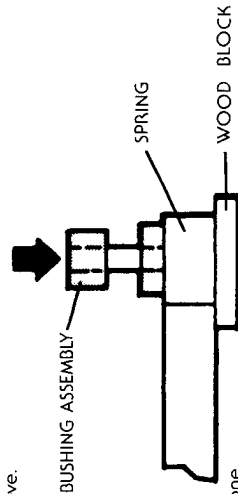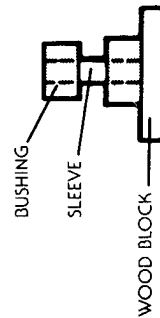

4. Install the spacer washers onto the sleeves if included with your kit. On some vehicles with extra-wide spring shackles it may be necessary to purchase washers with the same I.D. as the shackle bolts for use as spacer shims to prevent the spring eye from "walking" on the shackle bolt.